

Toshiba Date and Time

Change Date

With handset on hook press #651.

Enter the date YYMMDD.

Press Redial

Press Speaker

Change Time

With handset on hook press #652

Enter the time HHMMSS in 24 hour clock format.

Press Redial

Press Speaker

Change Date and Time on Contact Voice Mail

Dial Voicemail Extension Number (number dialed to hear main greeting)

Next Press *999

Enter Password 484

The Voice Mail will then announce an option to change date and time.

Press 3 for the Date/Business Hours menu

Press 1 for the Set Date/Time menu

Enter the month, day, and year MMDDYY

Enter the current time, using four digits, in 24 hour format HHMM.

Contact return you to the Date/Business Hours menu.

Press * and hang up

CTX Date and Time

To Set Date

Choose a line. You will get dial tone.

While listening to dial tone enter #651. You hear a confirmation tone. If you get a fast busy, the feature code has been changed or is not programmed.

Enter the date as YYMMDD and press #. You hear a confirmation tone.

Press Speaker.

To Set Time

Choose a line. You will get dial tone.

While listening to dial tone enter #652. You hear a confirmation tone. If you get a fast busy, the feature code has been changed or is not programmed.

Enter HHMMSS 24 hour clock format and press #. You hear a confirmation tone.

Press Speaker

.