

# QUICK START REFERENCE GUIDE CD/DVD CREATION STEPS

## STEP 1:


Bring up the specific video you would like to burn to CD/DVD

\*see vault browser quick start instructions




## STEP 2:

Click CREATE DISC

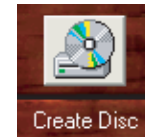

## STEP 3:

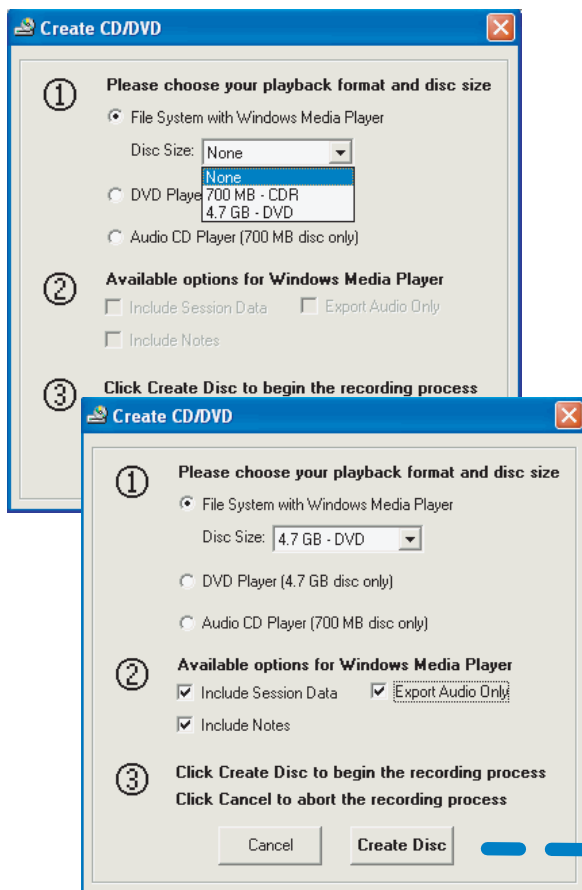

**A** Select the type of disc you would like to make - either 700MB CD or 4.7GB DVD

**B** Select if you would like to create a PC PLAYABLE file system CD/DVD -or-

Select if you would like to create a CONSUMER DVD PLAYER DVD


**C** If PC PLAYABLE File System is selected, select if you would like to include the following by clicking (CHECK MARKING) the appropriate option:

Include Session Data (case number, detective, suspect, etc...)  
Include Notes  
Export Audio Only

## STEP 4:

Click CREATE DISC

Create Disc

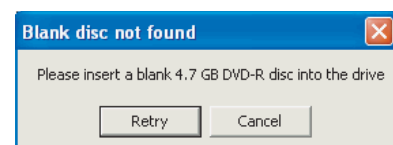

## SUPPORT

Contact us Today for more information or support

phone: 1-800-425-7637  
email: support@irecord.tv  
web: http://www.irecord.tv

iRecord will check to see if there is a blank CD/DVD loaded for burning.

Also, the (Disc 1 - Disc x) will display based on the length of the total recording that needs to be spanned across multi discs.

If a disc is not found, iRecord will continue prompting until a blank disc is inserted.

iRecord will automatically eject each disc when completed.